


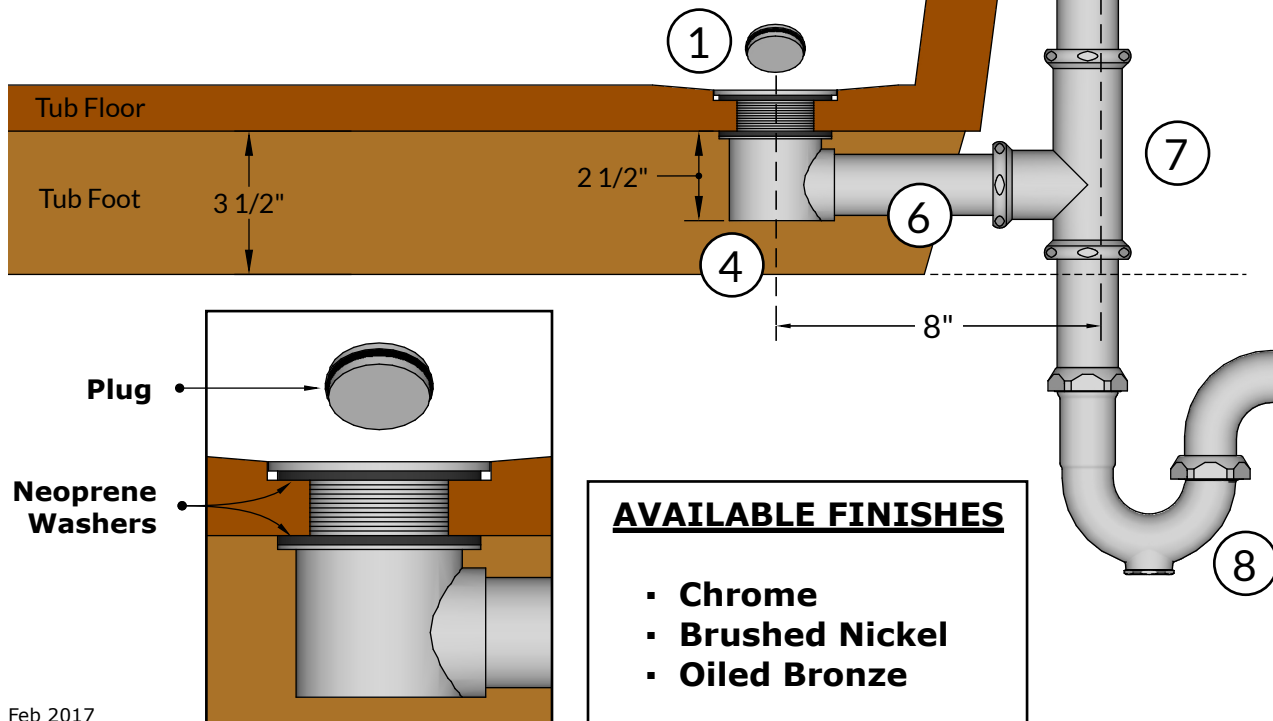

# Kyoto Overflow Parts

1. PRESS-FLOW DRAIN (SHORT) W/ WASHER
2. PRESS-FLOW OVERFLOW DRAIN W/ WASHER
3. OVERFLOW SHOE W/ WASHER
4. DRAIN SHOE W/ WASHER
5. OVERFLOW DOWN TUBE (BENT)
6. DRAIN HORIZONTAL TUBE
7. DRAIN TEE
8. P-TRAP (not included)



## AVAILABLE FINISHES

- Chrome
- Brushed Nickel
- Oiled Bronze

## Installing The Drain & Overflow

- Remove plugs (1&2) before assembly (orient in closed position and push out from back).
- Remove nut on Press-flo drain. The short drain goes here (1). Apply washer. Apply silicone sealant and tight drain (1) to shoe (4).
- Dry fit overflow drain (2) with washers and shoe (3). Dry fit the down tube (5) so that the upper part is parallel to the tub wall. Dry fit horizontal tube in to shoe (4).
- Cut the down tube (5) 1" from intersection. Cut horizontal drain tube (6) 1/4" from intersection. See closeup diagram. Attach drain tube (6) with silicone to drain shoe (4).
- Attach down tube (5) with silicone to overflow shoe (3).
- Loosely fit down tub (5) into tee (7) and onto horizontal drain tube (6), getting them in place at the same time.
- Tighten overflow drain (2) with silicone into overflow shoe (3) with washer – use plumbers tool called "drain key" for this.
- Check alignment of downtube and tighten tee nuts (7). Install plugs by pushing in flat.

